

# C10

EXT console

WWW.FANVIL.COM

## EXT console C10 Quick Installation Guide



## Check Your Package Contents

These are the items included with your C10 EXT console purchase:



C10 EXT console



Plastic fitting



C10 Quick Installation Guide



Screw



Ethernet Cable




Base bracket



Power adaptor (optional)

## 2 Components of EXT console

Outside view

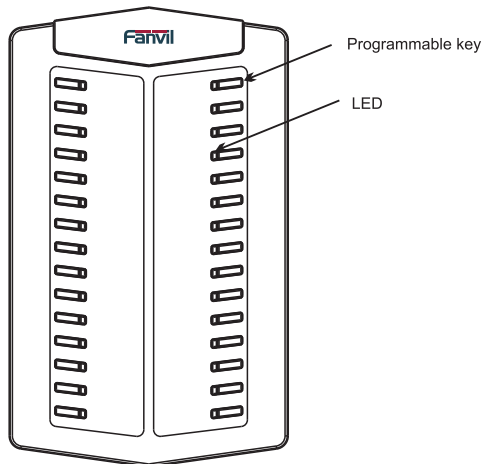

LED introduction


Table 1 Programmable key LEDs for BLF		Table 2 Programmable key LEDs for Presence	
LED Status	Description	LED Status	Description
Steady green	The object is in idle status	Steady green	The object is online
Slow blinking red	The object is ringing	Slow blinking red	The object is ringing
Steady red	The object is active	Steady red	The object is active
Fast blinking red	The object is failed	Fast blinking red	The object is failed
Off	No subscribe	Off	No subscribe

Table 3 Programmable key LEDs for line		Table 4 Programmable key LEDs for MWI	
LED Status	Description	LED Status	Description
Steady green	The line is active	Blinking green	There are new voice mails
Fast Blinking green	There is an incoming call or the line is ringing	Off	There is no new voice mail
Slow Blinking green	The call is on hold		
Slow Blinking red	Registration is unsuccessful		
Off	The line is unapplied or idle		


## 3

# Assembly of EXT console

If there is only one EXT console connected to the host, you don't need power supply for EXT console, and the host supplies the power directly. The connection diagram as below.

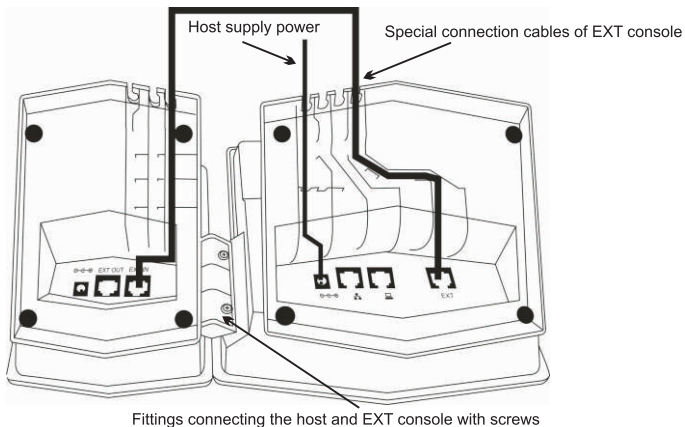


When there is more than one console, you need supply only one power adaptor for the first one, and the other one doesn't need power adaptor. C62 can connect 5 EXT consoles at most. The connection diagram as below:

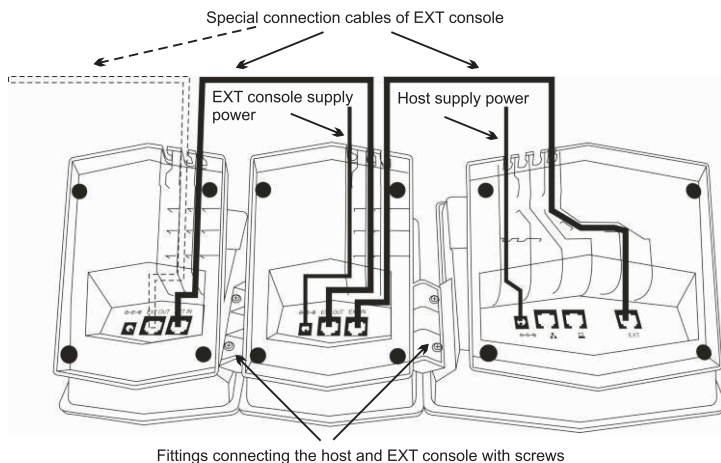

## 4

# Web Configuration

Open your web browser and type in the IP address of the phone.

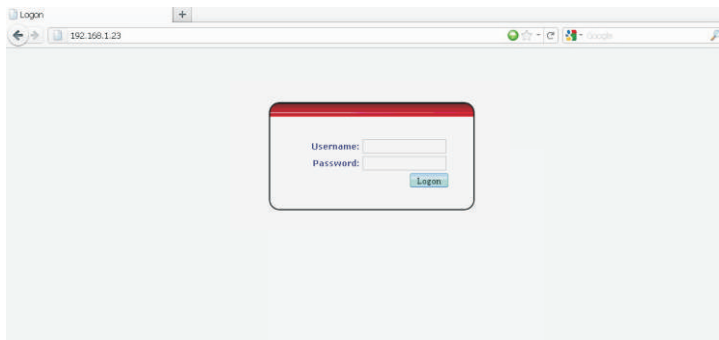

Enter username and password.

The default username and password are "admin".

Please see the following screen after login.

**Fanvil**  
C10

STATUS WIZARD CALL LOG MMI SET

> BASIC

- NETWORK
- VOIP
- PHONE
- FUNCTION KEY
- MAINTENANCE
- SECURITY
- LOGOUT


**Network**

WAN		LAN	
Connect Mode	DHCP	IP Address	192.168.10.1
MAC Address	00:01:03:0f:99:14	DHCP Server	ON
IP Address	192.168.1.23		
Gateway	192.168.1.1		

**Phone Number**

SIP LINE 1	1111@192.168.1.2 :5060	Registered
SIP LINE 2	4152@192.168.1.2 :5060	Registered
SIP LINE 3	4155@192.168.1.4 :5060	Registered
SIP LINE 4	02920003299@epgate.co.uk :5060	Time Out
IAX2	@-4569	Unapplied

Then click FUNCTION KEY->External Console

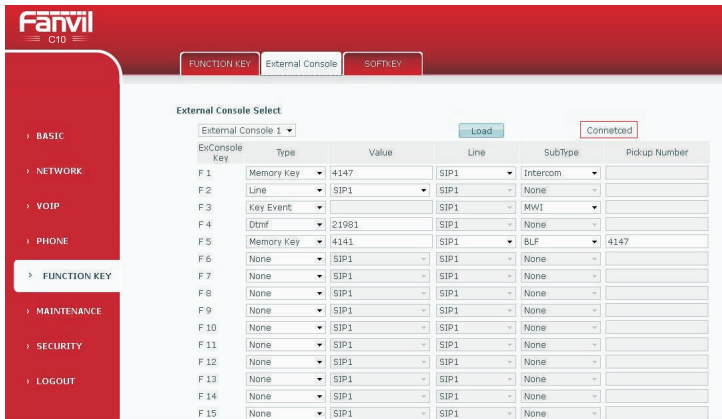

**External Console Select**

External Console 1 ▼ Load Connected

ExConsole Key	Type	Value	Line	SubType	Pickup Number
F 1	Memory Key ▼	4147	SIP1 ▼	Intercom ▼	
F 2	Line ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 3	Key Event ▼		SIP1 ▼	MWI ▼	
F 4	Dtmf ▼	21981	SIP1 ▼	None ▼	
F 5	Memory Key ▼	4141	SIP1 ▼	BLF ▼	4147
F 6	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 7	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 8	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 9	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 10	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 11	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 12	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 13	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 14	None ▼	SIP1 ▼	SIP1 ▼	None ▼	
F 15	None ▼	SIP1 ▼	SIP1 ▼	None ▼	

The red box displays that the EXT console has been connected. If connection is not successful or the EXT console is not connected, it will show "NOT Connected".

