

snom Expansion Module V2.0
snom Erweiterungsmodul V2.0




User Manual

Bedienungsanleitung

snom Expansion Module V2.0

This Expansion Module is designed for connection to the snom 320/360/370 VoIP phone. Please read and adhere to the instructions on setting up and cleaning the phone in the snom 320/360/370 user manual. They also apply to the Expansion Module.

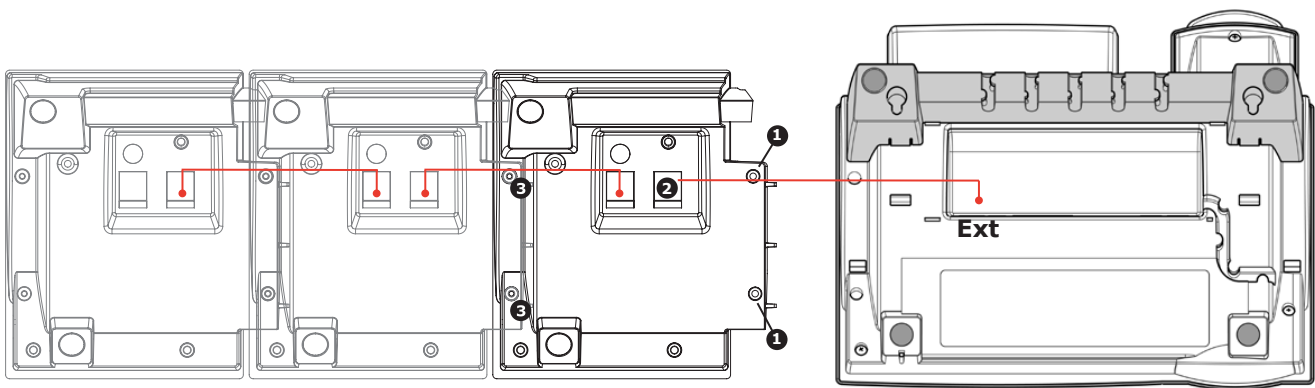

Installation procedure

- Unplug the power connector from the snom phone.
- Place the telephone and the Expansion Module upside down on a soft surface so that you can read nameplates from the front (see figure). The Expansion Module must be placed to the left of the telephone. The fixing holes in the Expansion Module (1) must be positioned over the corresponding screw domes on the telephone.
- Secure the Expansion Module to the telephone with the studs supplied.
- Connect the connection cable (2) as shown in the figure above.
- Affix the additional keyboard at the positions marked (3) in the illustration. Plug the connecting cord into the left jack of the first additional keypad and into the right jack of the new module. If you add a third additional

- keypad, attach it to the second one in the same manner.
- Now turn the telephone and Expansion Module over.
 - Plug in the power connector of your phone. Wait for the snom phone to boot completely. Just before boot-up is completed, all LEDs on the Expansion Module(s) will flash once. The Expansion Module(s) is/are now ready for operation.
 - Currently, **three** additional Expansion Modules with 42 function keys each can be connected to the snom phone. Their power is supplied by the phone; an external power adapter is **not** necessary.
 - When you press the question mark key “?” on the phone’s keypad the display will show the Expansion Module’s version (EK: 1.3, for example) following the software version of the phone itself.

Programming the Expansion Module

Configure the function keys on the Expansion Module using the built-in web interface of the phone. The default operation is Line. The LEDs associated with each key will reflect the status of that line, e.g. ringing, on-hold, connected call, etc.

Changing the label

The label panels for the function keys are included on a separate sheet enclosed with the operating instructions. Cut out the label you wish to use. To change the label panel, press the flexible cover together between your index finger and thumb and lift it out. The label panel can now be changed.

© 2007 snom technology Aktiengesellschaft.

All Rights reserved. This document is supplied by snom technology AG. No part of this document may be reproduced, republished or retransmitted in any form or by any means whatsoever, whether electronically or mechanically, including, but not limited to, by way of photocopying, recording, information recording or through retrieval systems, without the express written permission of snom technology AG.

snom technology AG reserves the right to revise this document and make changes at any time and without the obligation to notify any person and/or entity of such revisions and/or changes.

es unter dem Schnurhalter der zweiten Tastaturerweiterung fest. Wenn Sie eine dritte Tastaturerweiterung hinzufügen, schließen Sie sie auf die gleiche Weise an die zweite an.

- Telefon und Erweiterungsmodul umdrehen.
- Schließen Sie den Netzstecker an das Telefon an. Warten Sie, bis das snom-Telefon vollständig gebootet hat. Unmittelbar bevor dieser Vorgang beendet ist, leuchten die LED-Anzeigen auf dem/den Erweiterungsmodul(en) einmal auf. Jetzt ist/sind das/die Erweiterungsmodul/e zur Benutzung bereit.
- Zur Zeit können **drei** Erweiterungsmodul(e) mit je 42 Funktionstasten mit dem snom-Telefon verbunden werden. Es wird vom Telefon mit Strom versorgt und benötigt **kein** separates Netzteil.
- Wenn Sie die Fragezeichen-Taste des snom-Telefon betätigen, wird Ihnen auf dem Display nach der Softwareversion des Telefons die Version des Erweiterungsmoduls angezeigt (z.B., EK: 1.3).

Programmierung des Erweiterungsmoduls

Programmieren Sie die Funktionstasten des Erweiterungsmoduls mit dem eingebauten Web-Interface des Telefons. Die Voreinstellung ist Leitung. Die LEDs der jeweiligen Taste zeigen den Status dieser Leitung, z.B., frei, läutend, verbunden, etc., an.

Auswechseln der Beschriftungstreifen

Die Beschriftungstreifen für die Funktionstasten sind der Bedienungsanleitung auf einem separaten Blatt zum Ausschneiden beigelegt. Um einen Beschriftungstreifen wechseln zu können, drücken Sie die flexible Kunststoffabdeckung mit Zeigefinger und Daumen oben und unten leicht zusammen und heben Sie sie heraus.

© 2007 snom technology Aktiengesellschaft.

Alle Rechte vorbehalten. Dieses Dokument wird von der snom technology AG zur Verfügung gestellt. Kein Teil dieses Dokumentes darf in irgendeiner Form oder zu irgendeinem Zweck nachgebildet, neu veröffentlicht oder übertragen werden, weder auf elektronischem noch auf mechanischem Wege. Dies beinhaltet vor allem, aber nicht ausschließlich, die Fotokopie und die Aufzeichnung ohne die ausdrückliche, schriftliche Genehmigung der snom technology AG.

Die snom technology AG behält sich jederzeit das Recht auf Überarbeitung und Änderung dieses Dokumentes vor, ohne dabei verpflichtet zu sein, die vorgenommenen Änderungen anzukündigen oder zu melden.



snom technology AG
Gradestraße 46
12347 Berlin
tel/enum: +49 30 39833-0
fax: +49 30 39833-111
sip: info@snom.com
mail: info@snom.com

Version 1.10

Copyright © 2007 snom technology AG. All rights reserved. snom® is a registered trademark of snom technology AG and affiliates in Germany, U.S.A. and certain other countries. Other trademarks or registered trademarks mentioned in this document are the property of their respective manufacturers or owners.

Product specifications contained in this document are subject to change without notice.

www.snom.com